





 



 



 

 
 


 





Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	Null		Shift + Eject
	Vol+		Vol +
	Vol-		Vol -
	Aspect		3D
	Audio		Dual
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Input		AV
	PMode		Shift + Format
	Ch.List		List
	SMode		Shift + Dual
	FAV		Pre Ch





Original	Replacement
 EPG	 Guide
 TV/Radio	 TV/R
 Subtitle	 Subt
 Text	 Text
 Index	 Smart
 Mix	 Eject
 Hold	 Media
 Reveal	 Options
 Subpage	 Shift + Subt
 Cancel	 D. Menu
 Size	 Format
 Rec	 Rec
 Stop	 Stop
 Play	 Play
 T-Shift/Pause	 Pause
 <<<	 <<<
 >>>	 >>>

Original	Replacement
 >>>	 >>>
 <<<	 <<<
 Red	 Red
 Green	 Green
 Yellow/ (A)	 Yellow
 Blue	 Blue

