



Original		Replacement		Original		Replacement	
	Power		Power		<<		<< / Tune-
	Open / Close		Eject / Surround		Stop		Stop / Hold
	1		1		Play / Pause		Play / Slow
	2		2		>>		>> / Tune+
	3		3		l<<		l<< / Preset-
	4		4		>>l		>>l / Preset+
	5		5		Menu		Menu / Home
	6		6		Return		Back / Return
	7		7		Top Menu		D.Menu / Top
	8		8		Up		Up
	9		9		Display		Display / Media
	Step		Pause / Step / Freeze		Left		Left
	0		0		Enter		OK
	3D		Picture / Format		Right		Right
	S.Fit		Text / Goto		Down		Down
	Zoom		Zoom / Size		Clear		Exit / Cancel / Clear
	Digest		Sleep / Timer		Mode		TV/Radio /



