
 

 





 
















 
 


 
 







Original	Replacement
 Eject	 Eject / Surround
 HDD	 Shift + 7
 DVD	 Shift + 2
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input	 AV / Input / RDS
 Audio	 Audio / Lang I/II

Original	Replacement
 0	 0
 Clear	 Exit / Cancel / Clear
 TV/DVD	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Play Mode	 Shift + Play /
 Zoom	 Zoom / Size
 System Menu	 Shift + D.Menu / Top Menu
 Title List	 Sound / Title
 Timer	 Sleep / Timer
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return





Original	Replacement
Down	Down
Display	Display / Media
I<<	I<< / Preset-
←	Shift + Left
→	Shift + Right
>>I	>>I / Preset+
<</<I/<II	<< / Tune-
Play	Play / Slow
>>/I>/II>	>> / Tune+
Tv Pause	Shift + Pause / Step / Freeze
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
Rec Stop	Shift + Stop /
DUB/HDD/DVD	Shift + 3
Rec Mode	Shift + Rec / Rec Mode
Vol+ Tv	Vol+

Original	Replacement
Prog+ Tv	Shift + CH+ /
Power Tv	Shift + Power
Vol- Tv	Vol-
Prog- Tv	Shift + CH- /
Input Tv	Shift + AV / Input / RDS

