



 







 

 

 


















 



 



 



 



 

 

 















Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 EPG	 Guide / EPG / -/--	 Display	 Display / Media
 REP	 TV/Radio /	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 Rec List	 Shift + Rec / Rec Mode	 Right	 Right
 CH List	 Smart / List	 Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Down	 Down
 Eject	 Eject / Surround	 Exit	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode	 1	 1
 Stop	 Stop / Hold	 2	 2
 I<<	 I<< / Preset-	 3	 3
 >>I	 >>I / Preset+	 4	 4
 Pause	 Pause / Step / Freeze	 5	 5
 Play	 Play / Slow	 6	 6
 <<	 << / Tune-	 7	 7
 >>	 >> / Tune+	 8	 8
 Source	 AV / Input / RDS	 9	 9





Original	Replacement	Original	Replacement
	0		Title / Reveal
	Recall		PRO
	Fav		LAN / Hold
	Vol +		Size / A-B
	Picture		Goto / Subpage
	Nicam / A2		Index / Slow
	CH +		
	Vol -		
	Sound		
	Sleep		
	CH -		
	Red		
	Green		
	Yellow		
	Blue / Screen		
	Setup / TV/Txt		
	D-Menu /		
	0		Shift + Sound / Title
	Back / Return		Shift + Display / Media
	Fav / Marker / PC		Shift + Smart / List
	Vol+		Zoom / Size
	Picture / Format		Text / Goto
	Audio / Lang I/II		Info / Angle
	CH+ / Page+		
	Vol-		
	Sound / Title		
	Sleep / Timer		
	CH- / Page-		
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	Setup / OPT /		
	D.Menu / Top		



Cancel Menu