


 




 



 



 













Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Red/Rec/Instant	 Red	 Vol+	 Vol +
 Green/Left	 Green	 Vol-	 Vol -
 Yellow/Stop	 Yellow	 Mute	 Mute
 Blue/play	 Blue	 P+	 Ch +
 White/Right	 >>	 P-	 Ch -
 >◆	 E-MANUAL D.MENU D. Menu	 1	 1
 [I]	 GUIDE Guide	 2	 2
 [o]/Timer	 PROG SLEEP Sleep	 3	 3
 [?]	 ZOOM Eject	 4	 4
 [◆]	 PICTURE FORMAT Format	 5	 5
 [≡]/Text	 REPEAT TEXT Text	 6	 6
 Menu	 TOP MENU MENU Menu	 7	 7
 OK	 OK Ok	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 P<P	 FAV PRE-CH Pre Ch





Original		Replacement		Original	Replacement
	[i+]		Info		
	I-II		Dual		
	[> <]		Subt		
	[1 2]		3D		
	[]->		AV		
	♪ Smart		Smart		
	[] Smart		Media		
	[<>]		Back		
	[-o-]/Active Control		Options		





Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/<<		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/>>/□		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[◆]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Original		Replacement		Original		Replacement	
	[> <]		Subt				
	[1 2]		3D				
	[]→		AV				
	♪ Smart		Smart				
	[] Smart		Media				
	[<>]		Back				
	[-o-]/Active Control		Options				









Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/Left		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/Right		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Original	Replacement	Original	Replacement
 [> <]	 Subt		
 [1 2]	 3D		
 []→	 AV		
 J Smart	 Smart		
 [] Smart	 Media		
 [<<]	 Back		
 [-o-]/Active Control	 Options		

