



Original	Replacement	Original	Replacement
	1		TOP MENU / RDS DISPLAY
	2		D.Menu / Top
	3		Left
	Power		Up
	4		Right
	5		Down
	6		<< / Tune-
	7		>> / Tune+
	8		ENTER / Play reverse
	9		OK
	0		Play / Slow
	Guide / EPG / -/--		Audio / Lang I/II
	Shift + Vol-		Yellow / YouTube / Repeat
	Shift + Vol+		+100 / DISC SKIP / A/B
	Stop / Hold		Fav / Marker / PC
	DVD / DVD		AUTO / STOP
	Pause / Step / Freeze		HDMI - SAT
			DVD / DVD
	Shift + Left		AUX / DVD I<<<
	Shift + Right		CD/DVD / DVD
	Shift + 6		TUNER / DISC



