

 
 



Original	Replacement
Standby	Power
AQT/Auto/Open/CI	Eject / Surround
P.Mode	Picture / Format
S.Mode	Sound / Title
List/Angle	Smart / List
Aspect	Shift + Picture / Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Back	Back / Return

Original	Replacement
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
Audio	Audio / Lang I/II
CH-	CH- / Page-
Sub-T	Subtitle / EQ
Menu	Menu / Home
[i+]/Info	Info / Angle
Input	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
DVD Setup	Shift + 2





Original		Replacement		Original		Replacement	
	Rec		Rec / Rec Mode		♥-/D.Disp	 + 	Shift + Guide / EPG / -/--
	Sleep		Sleep / Timer		♥/D.Title		Fav / Marker / PC
	Red/D.Prog		Red / Netflix / Search		♥+/D.Goto		Text / Goto
	Tv/R		TV/Radio /				
	Green/Step		Green / APP / Repeat				
	Yellow/RPT		Yellow / YouTube / Repeat				
	Blue/A-B/SCR		Blue / Prime Video / Random				
	[≡]/Slow	 + 	Shift + Play /				
	[≡▲]/Stop	 + 	Shift + Up				
	[≡▼]/Zoom	 + 	Shift + Down				
	[≡i]/I<<		I<< / Preset-				
	Play		Play / Slow				
	[+]/Pause		Pause / Step / Freeze				
	[+]/>>I		>>I / Preset+				
	[≡?]/<<		<< / Tune-				
	EPG/D.Menu		Guide / EPG / -/--				
	[≡o]/>>		>> / Tune+				

