 
 
 

 





 
 


 
 

 




Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol +
 Vol-	 Vol -
 Prog+	 Ch +
 Prog-	 Ch -
 Up	 Up

Original	Replacement
 OK	 Ok
 Down	 Down
 Left	 Left
 Right	 Right
 Menu	 Menu
 Return	 Back
 Tv/Radio	 TV/R
 O)/A-B	 Dual
 List	 List

