





 


 


 


 
 



 



 

 
 
 

 
 
 
 
 




 
 








 







 


 


 


 

 









 

 





 

 
 


















	Original	Replacement		Original	Replacement
	Standby		Power		Down
	Rec PVR		Rec		Right
	List PVR		Smart		Left
	Mute		Mute		Ok
	EPG		Guide		Vol +
	Audio		Dual		Vol -
	Info		Info		1
	DTV/VCR		Media		2
	TTX		Text		3
	Subtitle		Subt		4
	Menu		Menu		5
	Exit		Exit		6
	Favourite		Pre Ch		7
	Tv/Radio		TV/R		8
	CH+		Ch +		9
	CH-		Ch -		0
	Up		Up		Recall
					Back





	Original	Replacement		Original	Replacement
	Standby		Power		Down
	Rec PVR		Rec		Right
	List PVR		List		Left
	Mute		Mute		Ok
	EPG		Guide		Vol +
	Audio		Dual		Vol -
	Info		Info		1
	DTV/VCR		Media		2
	TTX		Text		3
	Subtitle		Subt		4
	Menu		Menu		5
	Exit		Exit		6
	Favourite		Pre Ch		7
	Tv/Radio		TV/R		8
	CH+		Ch +		9
	CH-		Ch -		0
	Up		Up		Recall
					Back





Original	Replacement	Original	Replacement
GOTO	Options		
<<	<<		
>>	>>		
I<<	I<<		
>>I	>>I		
Play	Play		
Pause	Pause		
Stop	Stop		
Repeat	+ Shift + Text		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		

