



Original	Replacement
 Power	 Power
 TV Standby	 Shift + Power
 TV Input	 AV / Input / RDS
 TV Vol +	 Shift + Vol+
 TV Mute	 Shift + Mute / Dimmer
 TV CH +	 Shift + CH+ /
 TV Vol -	 Shift + Vol-
 TV CH -	 Shift + CH- /
 Audio	 Audio / Lang I/II
 SUB-T	 Subtitle / EQ
 TV / STB	 Shift + TV/Radio / Program
 TV / Radio	 TV/Radio /
 Mute	 Mute / Dimmer
 Text	 Text / Goto
 Sleep	 Sleep / Timer
 Voltar	 Setup / OPT /
 Guia TV	 Shift + Guide / EPG / -/-

Original	Replacement
 VOD	 Shift + Audio / Lang I/II
 Vol +	 Vol+
 Up	 Up
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 CH -	 CH- / Page-
 Down	 Down
 Menu	 Menu / Home
 Lista Gravacoes	 Smart / List
 Lista Gravacoes	 Shift + Smart / List
 Exit	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold





Original	Replacement
	TUNE- << / Tune-
	SLOW Play / Slow
	TUNE+ >> / Tune+
	SHIFT + NETFLIX SEARCH Shift + Red / Netflix /
	NETFLIX SEARCH Red / Netflix / Search
	APP REPEAT Green / APP / Repeat
	SHIFT + YouTube REPEAT A-B Shift + Yellow / YouTube /
	YouTube REPEAT A-B Yellow / YouTube / Repeat
	SHIFT + Prime Video RANDOM Shift + Blue / Prime
	Prime Video RANDOM Blue / Prime Video / Random
	TV 1 1
	DVD 2 2
	CD - STB 3 3
	VIDEO 4 4
	TAPE 5 5
	TUNER 6 6
	AUX - HDD 7 7

Original	Replacement
	USB 8 8
	BLUETOOTH 9 9
	GUIDE EPG Guide / EPG / -/-
	HDMI - BAT 0 0
# button"/>	PC FAV MARKER Fav / Marker / PC

