


 
 






 



 

 

 





 
 


 



 



 

 



 

 



 



 

 

 





 

 






Original	Replacement	Original	Replacement
 Standby	 Power	 Clear	 Exit
 Open / Close	 Eject	 Setup	 Options
 Mute	 Mute	 Search	 TV/R
 OSD	 Smart	 Up	 Up
 Step	 Shift + Pause	 Right	 Right
 Recover	 Media	 Down	 Down
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 Subtitle	 Subt
 4	 4	 Audio	 Dual
 5	 5	 Play	 Play
 6	 6	 Pause	 Pause
 7	 7	 Stop	 Stop
 8	 8	 I<<	 I<<
 9	 9	 >>I	 >>I
 0	 0	 <<	 <<
 +10	 Guide	 >>	 >>





Original	Replacement	Original	Replacement
Angle	Format		
Zoom	+  Shift + Eject		
3D	3D		
Prog	Sleep		
Title	Info		
Repeat	Text		
A-B	+  Shift + Text		
Slow	+  Shift + Play		
Menu	Menu		
N/P	List		
Vol -	Vol -		
Vol +	Vol +		
PS	Yellow		
Audio Up	+  Shift + Dual		

