


 
 






 



 

 

 




 
 


 



 



 

 



 

 



 



 

 

 





 

 






Original		Replacement		Original		Replacement	
	Standby		Power		Clear		Exit
	Open / Close		Eject		Setup		Options
	Mute		Mute		Search		TV/R
	OSD		Smart		Up		Up
	Step		Shift + Pause		Right		Right
	Recover		Media		Down		Down
	1		1		Left		Left
	2		2		Enter		Ok
	3		3		Subtitle		Subt
	4		4		Audio		Dual
	5		5		Play		Play
	6		6		Pause		Pause
	7		7		Stop		Stop
	8		8		I<<		I<<
	9		9		>>I		>>I
	0		0		<<		<<
	+10		Guide		>>		>>





Original		Replacement		Original		Replacement	
	Angle		Format				
	Zoom	+	Shift + Eject				
	3D		3D				
	Prog		Sleep				
	Title		Info				
	Repeat		Text				
	A-B	+	Shift + Text				
	Slow	+	Shift + Play				
	Menu		Menu				
	N/P		List				
	Vol -		Vol -				
	Vol +		Vol +				
	PS		Yellow				
	Audio Up	+	Shift + Dual				

