







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 DTV	 Shift + 1
 Radio	 TV/Radio /
 USB	 Shift + 8
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV Guide	 Guide / EPG / -/-
 0	 0

Original	Replacement
 Recall	 Back / Return
 Vol +	 Vol+
 P.Mode	 Picture / Format
 CH +	 CH+ / Page+
 Vol -	 Vol-
 S.Mode	 Sound / Title
 CH -	 CH- / Page-
 FAV	 Fav / Marker / PC
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Source	 AV / Input / RDS
 Down	 Down
 Info	 Info / Angle





Original		Replacement	
	Aspect	+	Shift + Picture / Format
	Sleep		Sleep / Timer
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Text Hold	+	Shift + Stop /
	Text/DVD Zoom		Zoom / Size
	Display Power		Display / Media
	Display Power	+	Shift + Power
	Rec / DVD Menu		D.Menu / Top
	Rec / DVD Menu		Rec / Rec Mode
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop / Open/Close		Eject / Surround
	Stop / Open/Close		Stop / Hold
	Rec List / DVD Setup		Smart / List
	Rec List / DVD Setup		Setup / OPT /

Original		Replacement	
	<<		<< / Tune-
	>>		>> / Tune+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Red / Goto		Red / Netflix / Search
	Green / A-B		Green / APP / Repeat
	Yellow / Angle /		Yellow / YouTube / Repeat
	Blue / Repeat		Blue / Prime Video / Random

