


 



 




 


 





 

 

 

 



 

 

 



 

 



 

 

 





 








Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	[≡]		Text
	Google Play		Shift + Media
	Netflix		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Guide		Guide
	Rec List		List
	Input		AV
	*		Menu
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Back		Back
	TV		TV/R

Not voice control function.





HOME	Home	HOME SMART	Smart	EXIT	Exit	CLEAR EXIT	Exit
+	Vol+	+	Vol +				
-	Vol-	-	Vol -				
↺	Recall	FAV PRE-CH	Pre Ch				
⊗	Mute	MUTE	Mute				
+	CH+	+	Ch +				
-	CH-	-	Ch -				
AUDIO	Audio	SOUND DUAL	Dual				
Ⓜ	[...]	AD SUBT	Subt				
HELP	Help	E-MANUAL D.MENU	D. Menu				
⏮	<<	⏮	<<				
▶	Play	PLAY MODE ▶	Play				
⏭	>>	⏭	>>				
REC	Rec	REC MODE ●	Rec				
⏸	Pause	⏸	Pause				

**Not voice control function.**

