



| Original | Replacement |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Picture |  Picture / Format |
|  Sound |  Sound / Title |
|  Zoom |  Zoom / Size |
|  Subtitle |  Subtitle / EQ |
|  EPG |  Guide / EPG / -/-- |
|  FAV |  Fav / Marker / PC |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |

| Original | Replacement |
|---|---|
|  CHN List |  Smart / List |
|  0 |  0 |
|  Return / Back |  Back / Return |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Source |  AV / Input / RDS |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  TV / Radio |  TV/Radio / |
|  Vol + |  Vol+ |
|  Home |  D.Menu / Top |
|  PR + |  CH+ / Page+ |
|  Vol - |  Vol- |
|  PR - |  CH- / Page- |





| Original | Replacement |
|--------------------|-----------------------------|
| Rec | Rec / Rec Mode |
| Sleep | Sleep / Timer |
| Info | Info / Angle |
| Play/Pause / Index | Play / Slow |
| Play/Pause / Index | Pause / Step / Freeze |
| << / Reveal | << / Tune- |
| >> / Mix | >> / Tune+ |
| Stop / Cancel | Stop / Hold |
| I<< / Size | I<< / Preset- |
| >>I / Sub-Page | >>I / Preset+ |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| I/II / Nicam | Audio / Lang I/II |
| Text | Text / Goto |
| Freeze / Hold | Shift + Stop / Hold |

Hold

| Original | Replacement |
|----------|------------------|
| PVR List | Display / Media |
| Quick | Setup / OPT / |
| AD | Eject / Surround |
| 3D | Shift + 3 |

