 

 


 








 
 











 






Original		Replacement		Original		Replacement	
	Power		Power		EPG		Guide
	Info		Info		Recall		Back
	Mute		Mute		Freeze		Pause
	P.Mode		Shift + Format		Sleep		Sleep
	S.Mode		Dual		Menu		Menu
	Nicam		Shift + Dual		Source		AV
	Aspect		Format		Up		Up
	1		1		Right		Right
	2		2		Down		Down
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Vol -		Vol -
	6		6		Vol +		Vol +
	7		7		CH -		Ch -
	8		8		CH +		Ch +
	9		9		Txt / Repeat		Text
	0		0		Hold / A-B		Shift + Pause





Original	Replacement	Original	Replacement
 Mix / Language	 Shift + Text	 Rec / Open/Close	 Rec
 Subtitle /	 Subt	 T-Shift	 3D
 Index / Setup	 Options	 Page Up / I<<	 I<<
 Size / DVD	 D. Menu	 Page Down /	 >>I
 Reveal / Title	 Smart		
 Cancel / Exit / Zoom	 Exit		
 Red / Program	 Red		
 Green / Goto	 Green		
 Yellow / Angle	 Yellow		
 Blue / D.Dis	 Blue		
 Play / Pause	 Play		
 List / Stop	 Stop		
 List / Stop	 List		
 DTV/Radio / <<	 TV/R		
 DTV/Radio / <<	 <<		
 Fav / >>	 Pre Ch		
 Fav / >>	 >>		

