 





 

 



 







 



 



 



 



 



























 







Original		Replacement		Original		Replacement	
	P100		Guide / EPG / -/--		AV		AV / Input / RDS
	Power		Power		0		0
	REV		Sleep / Timer		TV		TV/Radio /
	DOUB		Smart / List		P+		Up
	1		1		P+		CH+ / Page+
	2		2		Mute		Mute / Dimmer
	3		3		TV/TXT		Text / Goto
	Hold		Stop / Hold		Menu		Menu / Home
	4		4		Vol-		Vol-
	5		5		Vol-		Left
	6		6		OK		OK
	SUB		Subtitle / EQ		Vol+		Vol+
	Update		Display / Media		Vol+		Right
	7		7		SWAP		Back / Return
	8		8		P-		CH- / Page-
	9		9		P-		Down
	MIX		D.Menu / Top		16:9		Picture / Format





Original	Replacement	Original	Replacement
	Red  Red / Netflix / Search		
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	Violet/Info  Info / Angle		
	[]  Zoom / Size		
	PC  Fav / Marker / PC		
	PT  Setup / OPT /		

Original	Replacement	Original	Replacement

