



 
 
 
 
 

 

 

 
 





 


 

 

 
 

 

 

 
 

 
 
 

 
 
 



 
 
 

 



 
 
 
 

 
 

 

 





Original	Replacement	Original	Replacement
 Standby	 Power	 Source / AV	 AV
 TV / Radio	 TV/R	 Info	 Info
 TV Guide	 Guide	 Up	 Up
 Mute	 Mute	 Right	 Right
 ATV	 Shift + Smart	 Down	 Down
 USB	 Media	 Left	 Left
 DVD	 Smart	 OK	 Ok
 Eject	 Eject	 Menu	 Menu
 Rec	 Rec	 Exit	 Exit
 Rec List	 Shift + Rec	 1	 1
 I<<	 I<<	 2	 2
 >>I	 >>I	 3	 3
 Stop	 Stop	 4	 4
 <<	 <<	 5	 5
 >>	 >>	 6	 6
 Play / Pause	 Play	 7	 7
 Play / Pause	 Pause	 8	 8





Original	Replacement	Original	Replacement
	9		9
	0		0
	Recall		Back
	Fav		Pre Ch
	Vol +		Vol +
	Vol -		Vol -
	Subtitle		Subt
	Aspect		Format
	Audio		Dual
	Sleep		Sleep
	CH +		Ch +
	CH -		Ch -
	Red / Goto		Red
	Green / A-B		Green
	Yellow / Angle		Yellow
	Blue / Repeat		Blue
	Blue / Repeat		Shift + Text

Original	Replacement	Original	Replacement
	D.Dis		Shift + Info
	Zoom		Shift + Eject
	Size		3D
	Display (Power)		Shift + Power
	Text / D.Setup		Text
	Text / D.Setup		Options
	Index / D.Menu		D. Menu
	Reveal / Title		List
	Hold		Shift + Pause

