



 

 


 

 



 

 



 



 









 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Down	 Down
 7	 7	 Display	 Display / Media
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Vol+	 Vol+
 0	 0	 FAV+	 Shift + Yellow / YouTube /
 -/--	 Shift + Guide / EPG / -/--	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Repeat/FAV-	 Shift + Green / APP /
 S.Mode	 Sound / Title	 CH-	 CH- / Page-
 Auto	 Eject / Surround	 Text	 Text / Goto





Original	Replacement
<<	<< / Tune-
>>/Hold	>> / Tune+
I<</Index	I<< / Preset-
>>I/Size	>>I / Preset+
Play	Play / Slow
Pause/Timeshift	Pause / Step / Freeze
Stop/Subpage	Stop / Hold
Zoom/Reveal	Zoom / Size
Sleep	Sleep / Timer
Tv/Radio	TV/Radio /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Audio/Nicam	Audio / Lang I/II
Guide	Guide / EPG / -/--
Rec	Rec / Rec Mode

Original	Replacement
Subtitle	Subtitle / EQ

