







 



 



 

 













 



 


 

 

 



 
 

 
 



 
















Original	Replacement	Original	Replacement
 Power	 Power	 P +	 CH+ / Page+
 1	 1	 P -	 CH- / Page-
 2	 2	 Menu / DVD	 Menu / Home
 3	 3	 Exit / Back	 Exit / Cancel / Clear
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Right	 Right
 8	 8	 OK	 OK
 9	 9	 Guide / Top Menu	 D.Menu / Top
 0	 0	 Guide / Top Menu	 Shift + D.Menu / Top Menu
 DVD RTN	 Shift + 2	 TV Fav/Radio / Setup	 TV/Radio /
 Input	 AV / Input / RDS	 TV Fav/Radio / Setup	 Shift + TV/Radio / Program
 Audio A/D	 Audio / Lang I/II	 Red	 Red / Netflix / Search
 Mute	 Mute / Dimmer	 Green	 Green / APP / Repeat
 Vol +	 Vol+	 Yellow	 Yellow / YouTube / Repeat
 Vol -	 Vol-	 Blue	 Blue / Prime Video / Random







 

 

 

 

 

 

 

 



 









 

 





 

 

 



 



 



 



 

 

 





Original	Replacement	Original	Replacement
Video Format	+ 4 Shift + 4		
Aspect	Picture / Format		
Index i+	Info / Angle		
Text / Mix	Text / Goto		
Open/Close / Subtitle	Eject / Surround		
Open/Close / Subtitle	+ Shift + Eject / Surround		
Stop / Dual I/II	Stop / Hold		
Stop / Dual I/II	+ Shift + Stop /		
Play	Play / Slow		
Pause / Step / [v]	Pause / Step / Freeze		
I<< / Reveal	I<< / Preset-		
<< / Hold	+ Shift + << /		
<< / Hold	<< / Tune-		
>> / Size	+ Shift + >> /		
>> / Size	>> / Tune+		
>>I / Cancel	+ Shift + >>I / Preset+		
>>I / Cancel	>>I / Preset+		

Original	Replacement



 





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit / Back		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Top Menu		D.Menu / Top
	Down		Down
	Set Up		Setup / OPT /
	[<>]		Picture / Format
	→ / ←		Display / Media
	[i+]/[≡i]		Info / Angle
	Text/Audio		Text / Goto
	Open/Close/Subtit		Eject / Surround
	Stop/O /I		Stop / Hold
	Play/[≡o]		Play / Slow
	Pause/Step/[▽]		Pause / Step / Freeze
	I<</[≡?]		I<< / Preset-
	<</[≡+]		<< / Tune-





Original	Replacement	Original	Replacement
 >>/[◆]	 >> / Tune+		
 >>I/[O]/[≡x]	 >>I / Preset+		

