

 



 


 

 
 
 




 



 

 
 


 
 









 





 



 


 
 


 

 
 


 
 








Original		Replacement		Original		Replacement	
	Standby		Power		Left / Vol -		Vol -
	Mute		Mute		OK		Ok
	EPG		Guide		Favourite		Pre Ch
	Audio		Dual		TV / Radio		TV/R
	Info		Info		Recall		Back
	PVR		Smart		Goto		Shift + Guide
	TTX		Text		1		1
	Subtitle		Subt		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	Up / CH +		Up		5		5
	Up / CH +		Ch +		6		6
	Down / CH -		Down		7		7
	Down / CH -		Ch -		8		8
	Right / Vol +		Right		9		9
	Right / Vol +		Vol +		0		0
	Left / Vol -		Left		<< REV		<<





Original	Replacement	Original	Replacement
 FWD >>	 >>		
 I<< Prev	 I<<		
 Next >>I	 >>I		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Repeat	 +  Shift + Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

Original	Replacement	Original	Replacement

