 



 

 

 

 

 

 

 

 

 





 

 

 











 

 











 

 



 

 
 






Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-

 



 

 

 

 

 





 



 



 

 











 

 











 





 

 
 








Original		Replacement		Original	Replacement
	Green / >>		>> / Tune+		
	Green / >>		Green / APP / Repeat		
	Yellow / I<<		I<< / Preset-		
	Yellow / I<<		Yellow / YouTube / Repeat		
	Blue / >>I		Blue / Prime Video / Random		
	Blue / >>I		>>I / Preset+		
	Text / Play/Pause		Text / Goto		
	Text / Play/Pause		Pause / Step / Freeze		
	Text / Play/Pause		Play / Slow		
	Text / Play/Pause		Stop / Hold		
	Text / Play/Pause		Subtitle / EQ		
	Text / Play/Pause		Subtitle / EQ		
	Text / Play/Pause		Zoom / Size		
	Text / Play/Pause		Zoom / Size		
	Text / Play/Pause		Shift + Exit / Cancel / Clear		
	Text / Play/Pause		Shift + Exit / Cancel / Clear		
	Text / Play/Pause		TV/Radio /		
	Text / Play/Pause		Audio / Lang I/II		
	Text / Play/Pause		Audio / Lang I/II		
	Text / Play/Pause		Rec / Rec Mode		





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Original	Replacement	Original	Replacement
	Green APP REPEAT Green / APP / Repeat		
	>> TUNE+ >> / Tune+		
	Yellow YouTube REPEAT A-B Yellow / YouTube / Repeat		
	I<< PRESET- I<< / Preset-		
	Blue Prime Video RANDOM Blue / Prime Video / Random		
	>>I PRESET+ >>I / Preset+		
	Play SLOW Play / Slow		
	Pause STEP-FREEZE Pause / Step / Freeze		
	[≡] GOTO TEXT Text / Goto		
	Stop/Still HOLD Stop / Hold		
	[≡+] FORMAT PICTURE Picture / Format		
	[≡o]/Subtitle EQ SUBTITLE Subtitle / EQ		
	[≡♦]/[+] SIZE ZOOM Zoom / Size		
	[≡x] OPT-TOOLS SETUP Setup / OPT /		
	Radio PROGRAM TV/RADIO TV/Radio /		
	Audio LANG I/II AUDIO Audio / Lang I/II		
	Rec REC MODE Rec / Rec Mode		

