

 



















 








Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search










 


























 



 







 







 

 

 














 



Original	Replacement
Green / >>>	>>> / Tune+
Green / >>>	Green / APP / Repeat
Yellow / I<<<	I<<< / Preset-
Yellow / I<<<	Yellow / YouTube / Repeat
Blue / >>>I	>>>I / Preset+
Blue / >>>I	Blue / Prime Video / Random
Text / Play/Pause	Text / Goto
Text / Play/Pause	Play / Slow
Text / Play/Pause	Pause / Step / Freeze
Stop / Still	Stop / Hold
Radio	TV/Radio /
Size / Aspect	Picture / Format
Size / Aspect	Zoom / Size
[≡x]	Eject / Surround
Subtitle / [≡o]	Subtitle / EQ
DMP	D.Menu / Top
Rec	Rec / Rec Mode

Original	Replacement





Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-

Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-





Original	Replacement	Original	Replacement
	Green APP REPEAT		
	>> TUNE+		
	Yellow YouTube REPEAT A-B		
	I<< PRESET-		
	Blue Prime Video RANDOM		
	>>  PRESET+		
	[=] GOTO TEXT		
	Play SLOW		
	Pause STEP - FREEZE		
	[=+] SHIFT + HOLD		
	Stop/Still HOLD		
	Radio PROGRAM TV/RADIO		
	[=◇]/[++] SIZE ZOOM		
	[=x] SURROUND		
	[=o]/Subtitle EQ SUBTITLE		
	DMP TOP MENU D.MENU		
	Rec REC MODE		

