

































Original	Replacement
 Power	 Power
 V-Mode	 D.Menu / Top
 Mute	 Mute / Dimmer
 SAT	 Shift + 0
 SAT	 Display / Media
 TV / AV	 AV / Input / RDS
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 FAV	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 Pause	 Pause / Step / Freeze
 7	 7

Original	Replacement
 8	 8
 9	 9
 Page +	 Shift + CH+ /
 TV / Radio	 TV/Radio /
 0	 0
 <-- PR	 Back / Return
 Page -	 Shift + CH- /
 Up / PR +	 CH+ / Page+
 Up / PR +	 Up
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK / List	 Smart / List
 OK / List	 OK
 Right / Vol +	 Right
 Right / Vol +	 Vol+
 Down / PR -	 CH- / Page-
 Down / PR -	 Down





Original	Replacement	Original	Replacement
 Menu	 Menu / Home	 < Slow	 I<< / Preset-
 Exit	 Exit / Cancel / Clear	 > Slow	 >>I / Preset+
 Info	 Info / Angle		
 EPG	 Guide / EPG / -/--		
 Red / Find	 Red / Netflix / Search		
 Green / V-Format	 Picture / Format		
 Green / V-Format	 Green / APP / Repeat		
 Yellow / TXT	 Text / Goto		
 Yellow / TXT	 Yellow / YouTube / Repeat		
 Blue / Audio	 Audio / Lang I/II		
 Blue / Audio	 Blue / Prime Video / Random		
 Record	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		
 Shift	 Setup / OPT /		
 << Fast	 << / Tune-		
 >> Fast	 >> / Tune+		

