



 

 



 







 





 



 

 

 

 
 
 

 



 





 






 


 
 
 

 









Original		Replacement		Original		Replacement	
	Sleep		Sleep / Timer		Vol-		Vol-
	Standby/On		Power		Play		Play / Slow
	Function		Setup / OPT /		Pause		Pause / Step / Freeze
	Memory		Smart / List		Sound		Sound / Title
	Bass		Audio / Lang I/II		Vol+		Vol+
	1		1		Stop		Stop / Hold
	2		2		I<</Tuning/File-		I<< / Preset-
	3		3		Tuning/File+ />>I		>>I / Preset+
	4		4		Display		Display / Media
	5		5		CD Random		Shift + 3
	6		6		Tape >		Shift + 5
	7		7		FM		TV/Radio /
	8		8		<< Tape		<< / Tune-
	9		9		Tape >>		>> / Tune+
	Preset/Folder Select		OK		Stop Tape		Shift + Stop /
	0		0		Rec Tape		Shift + Rec / Rec Mode
	Over		Fav / Marker / PC		Rec/Pause Tape		Rec / Rec Mode

