



 

 




 


















 



 










Original	Replacement	Original	Replacement
 Power	 Power	 Subtitle	 Subt
 Open / Close	 Eject	 I<<	 I<<
 Dimmer	 3D	 Step	 Shift + Pause
 BD	 Smart	 Pause	 Pause
 Tuner	 Shift + Smart	 >>I	 >>I
 Aux	 Media	 <<	 <<
 1 / RDS Display	 1	 Stop	 Stop
 2	 2	 Play	 Play
 3 / TA	 3	 >>	 >>
 4 / PTY -	 4	 Vol +	 Vol +
 5 / PTY Search	 5	 Vol -	 Vol -
 6 / PTY +	 6	 Mute	 Mute
 7	 7	 V-Sound	 Options
 8	 8	 Tuning/CH +	 Ch +
 9	 9	 Tuning/CH -	 Ch -
 0	 0	 Menu	 Menu
 Audio	 Dual	 Return	 Back





Original	Replacement	Original	Replacement
 Info	 Info	 Repeat A-B	 Text
 Exit	 Exit	 Repeat	 Shift + Text
 Up	 Up	 Cancel	 Shift + Exit
 Down	 Down	 Sleep	 Sleep
 Right	 Right	 Slow	 Shift + Play
 Left	 Left	 DSP	 Format
 Enter	 Ok		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 PopUp Menu / Title Menu	 List		
 Disc Menu	 D. Menu		
 Zoom	 Shift + Eject		
 PIP	 AV		
 Marker / Tuner Memory	 Pre Ch		
 Mo/St	 TV/R		

