
 



 

 

 



 

 

 


 



 









 

 

 

 
 
 



 



 
 









 





 



 

 

 

 



 

 



 

 

 



 

 

 

 

 





 

 
 
 

 

 





Original	Replacement	Original	Replacement
 System Standby	 Power	 4 Left	 Left
 Muting	 Mute / Dimmer	 5 Enter	 OK
 Play	 Play / Slow	 6 Right	 Right
 Pause	 Pause / Step / Freeze	 8 Down	 Down
 Stop	 Stop / Hold	 9 Recall	 Back / Return
 <<	 << / Tune-	 Master Vol+	 Vol+
 >>	 >> / Tune+	 Multi CH	 Smart / List
 I<</CH Preset-Tuner	 I<< / Preset-	 Tv CH+	 CH+ / Page+
 >>/CH Preset+ Tuner	 >> / Preset+	 Master Vol-	 Vol-
 Sound Field Mode	 Sound / Title	 Tv CH-	 CH- / Page-
 Sound Field	 Audio / Lang I/II	 1 Tuner	 1
 Sleep	 Sleep / Timer	 2 Tuner	 2
 Tv/Video/ANT	 TV/Radio /	 CD	 3
 DVD Menu	 D.Menu / Top	 4 Tuner	 4
 Standby AV	 AV / Input / RDS	 5 Tuner	 5
 Main Menu	 Menu / Home	 Tuner	 6
 2 Up	 Up	 7 Tuner	 7







Original	Replacement	Original	Replacement
 Standby	 Power	 0	 0
 Video 1	 Shift + 1	 Enter/D.Tuning/Return	 OK
 Video 2	 Shift + 2	 I<<	 I<< / Preset-
 DVD/LD	 TV/Radio /	 >>I	 >>I / Preset+
 MD/Tape	 Shift + 5	 <<	 << / Tune-
 CD	 Shift + 3	 >>	 >> / Tune+
 Tuner	 Shift + 6	 D.Skip/TV/VTR	 D.Menu / Top
 1	 1	 Play	 Play / Slow
 2	 2	 Pause	 Pause / Step / Freeze
 3	 3	 Stop	 Stop / Hold
 4	 4	 Muting	 Mute / Dimmer
 5	 5	 Master Vol+	 Vol+
 6	 6	 Master Vol-	 Vol-
 7	 7		
 8	 8		
 9	 9		
 >10/Shift/-/-	 Shift + 0		




 


 

 





 


 


 
 

 


 




 
 

 

 




Original		Replacement		Original		Replacement	
	Standby CD		Power		5 Video 1		Shift + 5
	Standby Video		Shift + Power		6 CD		Shift + 6
	Video 1		Shift + Smart / List		6 Video 1		6
	Video 2		Shift + Display / Media		7 CD		7
	DVD/LD		Shift + 2		7 Video 1		Shift + 7
	MD/Tape		Shift + D.Menu / Top Menu		8 CD		Shift + 8
	CD		TV/Radio /		8 Video 1		8
	Tuner		Text / Goto		9 CD		Shift + 9
	1 CD		Shift + 1		9 Video 1		9
	1 Video 1		1		>10/Shift/-/ CD		Fav / Marker / PC
	2 CD		Smart / List		>10/Shift/-/ Video 1		Shift + 0
	2 Video 1		2		0 CD		Guide / EPG / -/
	3 CD		Shift + 3		0 Video 1		0
	3 Video 1		3		Enter/D.Tuning/Return CD		Display / Media
	4 CD		4		Enter/D.Tuning/Return Video 1		OK
	4 Video 1		Shift + 4		I<< CD		I<< / Preset-
	5 CD		5		I<< Video 1		Shift + I<< / Preset-







Original		Replacement		Original		Replacement	
	Standby		Power		5 Video 2		5
	Standby Video		Shift + Power		6 MD/Tape		6
	Video 1		Shift + 1		6 Video 2		Shift + 6
	Video 2		Shift + 2		7 MD/Tape		7
	DVD/LD		Display / Media		7 Video 2		Shift + 7
	MD/Tape		Smart / List		8 MD/Tape		Shift + 8
	CD		Setup / OPT /		8 Video 2		8
	Tuner		TV/Radio /		9 MD/Tape		Shift + 9
	1 MD/Tape		Shift + Smart / List		9 Video 2		9
	1 Video 2		1		>10/Shift/-/- MD/Tape		Guide / EPG / -/-
	2 MD/Tape		Shift + Display / Media		>10/Shift/-/- Video 2		Shift + 0
	2 Video 2		2		0 MD/Tape		Fav / Marker / PC
	3 MD/Tape		Shift + 3		0 Video 2		0
	3 Video 2		3		Enter/D.Tuning/Return MD/Tape		Shift + OK
	4 MD/Tape		4		Enter/D.Tuning/Return Video 2		OK
	4 Video 2		Shift + 4		I<< MD/Tape		I<< / Preset-
	5 MD/Tape		Shift + 5		I<< Video 2		Shift + I<< / Preset-



