



 



 



 

 

 



 




 



 


 
 


 
 







 



 



 



 

 


 
 




 
 
 
 
 

 

 

 

 
 
 

 
 
 

 

 

 
 
 
 
 
 

 
 
 
 





Original	Replacement	Original	Replacement
 Power	 Power	 Recall	 Back
 Nicam/Eject	 Eject	 Tv-Menu	 Menu
 Mute	 Mute	 Source	 AV
 Display	 Shift + Info	 DVD Setup	 Options
 Sleep	 Sleep	 Up	 Up
 Aspect	 Format	 Left	 Left
 1	 1	 Enter	 Ok
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Red/Repeat	 Red
 5	 5	 Green/Zoom	 Green
 6	 6	 Yellow/Angle	 Yellow
 7	 7	 Blue/Goto	 Blue
 8	 8	 Text/Audio	 Text
 9	 9	 Tv/Radio/Menu	 TV/R
 0	 0	 Exit	 Exit
 FAV	 Pre Ch	 P.Mode	 Shift + Format





Original	Replacement	Original	Replacement
 S.Mode	 Dual	 Info/Title	 Info
 Vol+	 Vol +		
 Vol-	 Vol -		
 CH+	 Ch +		
 CH-	 Ch -		
 I<</Index	 I<<		
 Play/Reveal	 Play		
 Pause	 Pause		
 >>I/Subpage	 >>I		
 <<	 <<		
 Stop/Size	 Stop		
 >>	 >>		
 Hold/A-B/Rec List	 List		
 Rec/Slow	 Rec		
 Time Shift	 Smart		
 EPG/Program	 Guide		
 Subtitle	 Subt		

