



Original	Replacement
 PLII PARA.	 D. Menu
 Adjust -	 Shift + Down
 DSP -	 Shift + Left
 Power	 Power
 CH/Level Up	 Ch +
 CH/Level Down	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Up / PTY Select	 Up
 Down / Search M.	 Down
 Right / EON PTY	 Right
 Left / EON TA	 Left
 Enter / RDS	 Ok
 Setup / OSD	 Options
 Menu / T.Tone	 Menu
 Display / Sleep	 Info

Original	Replacement
 Display / Sleep	 Sleep
 Return /	 Back
 Stop / P.Scan	 Stop
 << / Tune -	 <<
 >> / Tune +	 >>
 I<< / Preset -	 I<<
 >>I / Preset +	 >>I
 1 / Tuner	 1
 2 / CD	 2
 3 / AUX	 3
 4 / Tape	 4
 5	 5
 6 / Video 1	 6
 7 / Video 2	 7
 8 / Video 3	 8
 9	 9
 0	 0


 

 



 






 





 



 









 

 


 














 



 

 









Original	Replacement	Original	Replacement
Adjust +	SHIFT + Up	AUX Pause	SHIFT + Pause
7CH Dir	3D	AUX Play	SHIFT + Play
CH Sel / T/V	TV/R	AUX Stop / P.Scan	SHIFT + Stop
SPK SET	Exit	AUX << / Tune	SHIFT + <<<
Auto	Subt	AUX >> / Tune	SHIFT + >>>
DSP +	SHIFT + Right	AUX >> / Preset	SHIFT + >>
Stereo	Dual	AUX << / Preset -	SHIFT + <<<
CD	Green		
AUDIO	Red		
AUX	Yellow		
TV	Blue		
VCR	SHIFT + Red		
SAT	SHIFT + Blue		
CABLE	SHIFT + Yellow		
DVD	SHIFT + Green		
AUX Power /	SHIFT + Power		
AUX Rec	SHIFT + Rec		





	Original	Replacement		Original	Replacement
	AUDIO	 Red		TV 3	 3
	CD	 Green		TV 4	 4
	AUX	 Yellow		TV 5	 5
	TV	 Blue		TV 6	 6
	VCR	 Shift + Red		TV 7	 7
	DVD	 Shift + Green		TV 8	 8
	CABLE	 Shift + Yellow		TV 9	 9
	SAT	 Shift + Blue		TV 0	 0
	TV Power	 Power		CABLE Power	 Shift + Power
	TV CH/Level +	 Ch +		CABLE CH/Level +	 Shift + Ch +
	TV CH/Level -	 Ch -		CABLE CH/Level -	 Shift + Ch -
	TV CH Sel. / T/V	 Media		CABLE CH Sel.	 Shift + Smart
	TV Mute	 Mute		CABLE Mute	 Shift + Mute
	TV Volume +	 Vol +		CABLE Volume	 Shift + Vol +
	TV Volume -	 Vol -		CABLE Volume -	 Shift + Vol -
	TV 1	 1		CABLE 1	 Shift + 1
	TV 2	 2		CABLE 2	 Shift + 2








 




 
 




	Original	Replacement	
AUX 3	CABLE 3	 +  Shift + 3	
TAPE 4	CABLE 4	 +  Shift + 4	
5	CABLE 5	 +  Shift + 5	
VIDEO1 6	CABLE 6	 +  Shift + 6	
VIDEO2 7	CABLE 7	 +  Shift + 7	
VIDEO3 8	CABLE 8	 +  Shift + 8	
9	CABLE 9	 +  Shift + 9	
0	CABLE 0	 +  Shift + 0	

Original	Replacement






 




Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD Power	 Power
 DVD Menu /	 Menu
 DVD Audio Sel.	 Dual
 DVD Subtitle	 Subt
 DVD Zoom	 3D
 DVD OSD	 Format
 DVD Up	 Up
 DVD Left	 Left
 DVD Enter	 Ok

Original	Replacement
 DVD Right	 Right
 DVD Down	 Down
 DVD Display	 Info
 DVD Pause	 Pause
 DVD Play	 Play
 DVD Stop / P.Scan	 Stop
 DVD <<	 <<
 DVD >>	 >>
 DVD I<<	 I<<
 DVD >>I	 >>I
 DVD 1	 1
 DVD 2	 2
 DVD 3	 3
 DVD 4	 4
 DVD 5	 5
 DVD 6	 6
 DVD 7	 7





	Original	Replacement	
VIDEO3 8	DVD 8		8
9	DVD 9		9
0	DVD 0		0
POWER	SAT Power	 + 	Shift + Power
CH/LEVEL	SAT CH/Level +	 + 	Shift + Ch +
CH/LEVEL	SAT CH/Level -	 + 	Shift + Ch -
CH SEL T/V	SAT CH Sel.	 + 	Shift + Media
MUTE	SAT Mute	 + 	Shift + Mute
VOLUME	SAT Volume +	 + 	Shift + Vol +
VOLUME	SAT Volume -	 + 	Shift + Vol -
TUNER 1	SAT 1	 + 	Shift + 1
CD 2	SAT 2	 + 	Shift + 2
AUX 3	SAT 3	 + 	Shift + 3
TAPE 4	SAT 4	 + 	Shift + 4
5	SAT 5	 + 	Shift + 5
VIDEO1 6	SAT 6	 + 	Shift + 6
VIDEO2 7	SAT 7	 + 	Shift + 7

	Original	Replacement	
VIDEO3 8	SAT 8	 + 	Shift + 8
9	SAT 9	 + 	Shift + 9
0	SAT 0	 + 	Shift + 0





	Original	Replacement	
	AUDIO	 Red	
	CD	 Green	
	AUX	 Yellow	
	TV	 Blue	
	VCR	 +  Shift + Red	
	SAT	 +  Shift + Blue	
	CABLE	 +  Shift + Yellow	
	DVD	 +  Shift + Green	
	CD Pause	 Pause	
	CD Play	 Play	
	CD Stop	 Stop	
	CD I<<	 I<<	
	CD >>I	 >>I	
	CD 1	 1	
	CD 2	 2	
	CD 3	 3	
	CD 4	 4	

	Original	Replacement	
	CD 5	 5	
	CD 6	 6	
	CD 7	 7	
	CD 8	 8	
	CD 9	 9	
	CD 0	 0	
	VCR Power	 +  Shift + Power	
	VCR CH Sel.	 +  Shift + Media	
	VCR Rec	 +  Shift + Rec	
	VCR Play	 +  Shift + Play	
	VCR Mute	 +  Shift + Mute	
	VCR >>	 +  Shift + >>	
	VCR <<	 +  Shift + <<	
	VCR Volume -	 +  Shift + Vol -	
	VCR Volume +	 +  Shift + Vol +	
	VCR CH+	 +  Shift + Ch +	
	VCR CH-	 +  Shift + Ch -	





	Original		Replacement	
	VCR Pause		Shift + Pause	
	VCR Stop		Shift + Stop	
	VCR 1		Shift + 1	
	VCR 2		Shift + 2	
	VCR 3		Shift + 3	
	VCR 4		Shift + 4	
	VCR 5		Shift + 5	
	VCR 6		Shift + 6	
	VCR 7		Shift + 7	
	VCR 8		Shift + 8	
	VCR 9		Shift + 9	
	VCR 0		Shift + 0	

Original	Replacement

