





 

 



Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Info / Angle
	Guide / EPG / -/-
	Menu / Home
	CH+ / Page+
	Up

Original	Replacement
	Exit / Cancel / Clear
	Left
	Vol-
	OK
	Right
	Vol+
	Display / Media
	CH- / Page-
	Down
	TV/Radio /
	Sleep / Timer
	Subtitle / EQ
	Text / Goto
	Audio / Lang I/II
	<< / Tune-
	Play / Slow
	Pause / Step / Freeze





Original	Replacement	Original	Replacement
 >>	 >> / Tune+		
 Prev	 I<< / Preset-		
 Rec	 Rec / Rec Mode		
 FAV	 Fav / Marker / PC		
 Stop	 Stop / Hold		

