

 



 





 



 



 



 



 
































 

 

 

 








 


 

 
 
Original	Replacement
 Power	 Power
 Eject	 Eject / Surround
 DVD	 Shift + 2
 TUNER	 Shift + 6
 PORT	 Shift + Fav / Marker / PC
 AUX	 Shift + 7
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Audio	 Audio / Lang I/II
 0	 0

Original	Replacement
 Subtitle	 Subtitle / EQ
 I<<	 I<< / Preset-
 Step	 Shift + Pause / Step /
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Tuning+ / CH+	 CH+ / Page+
 Vol-	 Vol-
 Remain	 Yellow / YouTube / Repeat
 Tuning- / CH-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up





 



 










































Original	Replacement
 Return	 Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 Info	 Info / Angle
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Tuner Memory	 Blue / Prime Video / Random
 Mo / St	 Shift + Audio / Lang I/II
 Tuner Manual	 Smart / List
 Tuner Preset	 Display / Media
 SD / HD	 Guide / EPG / -/--
 V-H/P / V-Sound	 Setup / OPT /
 P.Bass	 Red / Netflix / Search
 Sound Edit	 Sound / Title
 Logo	 Fav / Marker / PC
 Dimmer	 Shift + Mute / Dimmer

Original	Replacement
 Slow	 Shift + Play /
 Repeat	 Green / APP / Repeat
 Zoom	 Zoom / Size
 CD Ripping	 D.Menu / Top
 Cancel	 Shift + Exit / Cancel / Clear
 Sleep	 Sleep / Timer





Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-

Original	Replacement
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Info	 Info / Angle
 Down	 Down

