

 
 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Nicam		Dual
	Sleep		Sleep
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Aspect		Format
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Exit		Exit
	Menu		Menu
	Media		Media
	Play / Pause		Play





Original	Replacement
 Play / Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Rec	 Rec
 Stop / Hold	 Stop
 << / Index	 <<
 >> / Size	 >>
 Text	 Text
 FAV	 Pre Ch
 FAV-	 Shift + Down
 FAV+	 Shift + Up
 Reveal	 Smart
 Cancel	 Shift + Exit
 Subpage	 Shift + Subt
 Subtitle	 Subt
 Red / TV/Radio	 Red
 Green	 Green

Original	Replacement
 Yellow	 Yellow
 Blue	 Blue

