




Original	Replacement
 AMP Power	 Power
 Power	 Shift + Power
 CD	 Yellow
 Tuner	 Green
 Network	 Media
 Phono	 Smart
 AUX	 Red
 Recorder	 Blue
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Input	 AV
 Info	 Info
 Source Direct	 3D
 Vol+	 Vol +

Original	Replacement
 Vol-	 Vol -
 Mute	 Mute
 Time/Top Menu	 Menu
 Mode	 Back
 Prog/Favorites	 Pre Ch
 Setup	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6



 
 





 


Original		Replacement		Original	Replacement
	7		7		
	8		8		
	9		9		
	0		0		
	+10		Guide		
	Clear		Exit		
	Dimmer		Format		
	Random		Subt		
	Repeat		Text		
	Search		TV/R		







Original	Replacement	Original	Replacement
 AMP Power	 Power	 Vol+	 Vol +
 Power	 Shift + Power	 Vol-	 Vol -
 CD	 Yellow	 Mute	 Mute
 Tuner	 Green	 Time/Top Menu	 Menu
 Network	 Media	 Mode	 Back
 Phono	 Smart	 Prog/Favorites	 Pre Ch
 AUX	 Red	 Setup	 Options
 Recorder	 Blue	 Up	 Up
 I<<	 I<<	 Down	 Down
 Sound Mode	 Dual	 Right	 Right
 >>I	 >>I	 Left	 Left
 Stop	 Stop	 Enter	 Ok
 Play	 Play	 1	 1
 Pause	 Pause	 2	 2
 Input	 AV	 3	 3
 Info	 Info	 4	 4
 Source Direct	 3D	 5	 5





	Original	Replacement	Original	Replacement
MNO	6	6		
PQRS	7	7		
TUV	8	8		
WXYZ	9	9		
0	0	0		
+10	+10	GUIDE		
CLEAR	Clear	EXIT		
DIMMER	Dimmer	PICTURE FORMAT		
RANDOM	Random	AD SUBT		
REPEAT	Repeat	REPEAT TEXT		

