



Original	Replacement	Original	Replacement
Power	Power	+10	Guide
Quick OSD	Media	Cancel	Exit
FL Select	Smart	Play Speed	Red
Open/Close	Eject	Dialogue	Green
Advanced	TV/R	Manual Skip	Yellow
Picture Mode	Format	Quick Replay	List
Repeat	Text	I<< Skip	I<<
1	1	Skip >>I	>>I
2	2	<< Slow/Search	<<
3	3	Slow/Search >>	>>
4	4	Stop	Stop
5	5	Pause	Pause
6	6	Play	Play
7	7	Top Menu	Shift + Menu
8	8	Menu	Menu
9	9	Functions	D. Menu
0	0	Return	Back





	Original	Replacement	Original	Replacement
	Up			
	Down			
	Right			
	Left			
	Enter			
	Subtitle			
	Audio			
	Angle/Page			
	Play Mode	+		Shift + Play
	Setup			Options
	Transfer Mode			AV
	Zoom	+		Shift + Eject
	DNR			3D

