



Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0	 0
 AV	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 TV	 TV/Radio /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 [≡] / Text	 Text / Goto
 Down	 Down
 Back	 Back / Return
 P+	 CH+ / Page+
 Vol +	 Vol+
 P-	 CH- / Page-
 Vol-	 Vol-
 ^ / Hold	 Shift + Stop /
 << / F.T/L	 << / Tune-
 Play / [?]	 Play / Slow





Original	Replacement	Original	Replacement
Play / [?]	+ Shift + Play /		
>> / Size	>> / Tune+		
>> / Size	+ Shift + >> /		
v / Timer / Book	+ Shift + Sleep / Timer		
Rec / Top Menu	+ Shift + Rec / Rec Mode		
Rec / Top Menu	Rec / Rec Mode		
Stop / [X]	Stop / Hold		
Pause / [≡i]	+ Shift + Pause / Step /		
Pause / [≡i]	Pause / Step / Freeze		
Zoom	Zoom / Size		
Sound / Title	Sound / Title		
O)/I/II	Audio / Lang I/II		
Sleep / Timer	Sleep / Timer		

