
 

 
 
 





 

 



 


 

 
 
 
 
 



 


 
 
 
 




 


 
 

 

 
 
 


 

 














Original	Replacement	Original	Replacement
 Standby - On	 Power	 1	 1
 TV / DVD	 AV	 2	 2
 Edit	 TV/R	 3	 3
 Select	 Info	 4	 4
 CH+	 Ch +	 5	 5
 Up	 Up	 6	 6
 Down	 Down	 7	 7
 CH-	 Ch -	 8	 8
 Right	 Right	 9	 9
 Left	 Left	 0	 0
 OK	 Ok	 Stop	 Stop
 Menu Disc	 D. Menu	 Play	 Play
 Menu System	 Menu	 Rec	 Rec
 Timer	 Sleep	 Pause	 Pause
 T/C	 Guide	 Rec Mode	 Shift + Rec
 Browser	 Smart	 I<<	 I<<
 Tuner	 Subt	 >>I	 >>I





Original		Replacement		Original		Replacement	
	Standby - On		Power		7		7
	TV / DVD		TV/R		8		8
	Up		Up		9		9
	CH+		Ch +		0		0
	CH-		Ch -		Rec		Rec
	Down		Down		Return		Back
	OK		Ok		Red		Red
	Menu System		Menu		Green		Green
	Timer		Sleep		Yellow		Yellow
	T/C		Guide		Blue		Blue
	Tuner		Subt		Tv Vol-		Vol -
	1		1		Tv Vol+		Vol +
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				

