


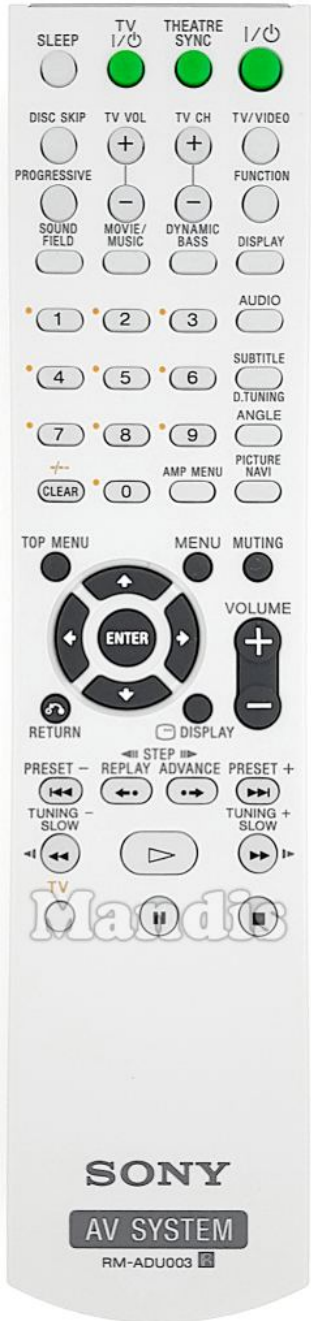

Original	Replacement	Original	Replacement
I/O	Power	I>/>>/Tuning+	>>
Theatre Sync	Shift + Power	I<</Preset-	I<<
Menu	Menu	>>I/Preset+	>>I
Top Menu	Shift + Menu	[ * ] Display	Info
Return	Back	<-/Replay/<II Step	Ch -
Muting	Mute	Step II>/Advance/→	Ch +
Volume+	Vol +	Clear	Exit
Volume-	Vol -	Disc Skip	Pre Ch
Up	Up	1	1
Enter	Ok	2	2
Down	Down	3	3
Right	Right	4	4
Left	Left	5	5
Play	Play	6	6
Pause	Pause	7	7
Stop	Stop	8	8
<</<I/Tuning-	<<	9	9



Slow



Original	Replacement	Original	Replacement
 0	 0		
 Angle	 Red		
 Subtitle/D.Tuning	 Subt		
 Audio	 Dual		
 Dynamic Bass	 Blue		
 Movie/Music	 Yellow		
 Sound Field	 Green		
 Progressive	 Options		
 Function	 TV/R		
 Display	 Shift + Info		
 AMP Menu	 Media		
 Sleep	 Sleep		
 Picture Navi	 Guide		

Original	Replacement	Original	Replacement





	Original	Replacement	Original	Replacement
	Power	Power		
	1	1		
	2	2		
	3	3		
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	0	0		
	-/--	GUIDE		
	TV Vol+	Vol +		
	TV Vol-	Vol -		
	TV CH+	Ch +		
	TV CH-	Ch -		
	Tv/Video	TV/R		

