


 

 
 
 







 

 



 





 








 

 








 


 



 


 
 












Original	Replacement
 Power DVD	 Power
 Direct Tv Rec	 TV/R
 Drive Select HDD	 Media
 Drive Select DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 * Cancel	 Guide
 Input Select	 AV
 CH+	 Ch +

Original	Replacement
 CH-	 Ch -
 ShowView	 Blue
 Manual Skip	 Subt
 Skip	 I<<
 Skip	 >>I
 Slow/Search	 <<
 Slow/Search	 >>
 Stop	 Stop
 Pause	 Pause
 Play/x1.3	 Play
 Direct Navigator/Top	 Menu
 Functions	 Options
 Sub Menu	 D. Menu
 Return	 Back
 Up	 Up
 Down	 Down
 Right /	 Right





Original	Replacement	Original	Replacement
	Left		+  Shift + Ch -
	Ok		Vol +
	Sleep		Vol -
	Info		
	3D		
	Format		
	+  Shift + AV		
	Exit		
	+  Shift + Rec		
	Rec		
	Red		
	Green		
	Yellow		
	Dual		
	+  Shift + Power		
	Eject		
	+  Shift + Ch +		

