



Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Repeat	 Green / APP / Repeat
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Repeat A-B	 Yellow / YouTube / Repeat
 Menu Disc	 Menu / Home
 Display	 Display / Media
 Up	 Up
 Left	 Left
 <<	 << / Tune-
 OK	 OK
 Right	 Right
 >>	 >> / Tune+
 Title/Return	 Sound / Title
 Down	 Down
 Setup	 Setup / OPT /

Original	Replacement
 I<<	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 USB	 Shift + 8
 Stop	 Stop / Hold
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
6	6



