








 


 





 

 

















	Original	Replacement		Original	Replacement
	Power VCR		Power		Ch -
	Up		Up		1
	Down		Down		2
	Right		Right		3
	Left		Left		4
	Play		Play		5
	Stop		Stop		6
	>>		>>		7
	<<		<<		8
	Pause/Slow		Pause		9
	Rec/OTR		Rec		0
	Display		Info		Guide
	Zero Stop		Smart		AV
	Jog/Shuttle On		Media		Vol +
	I<< Index		I<<		Vol -
	>>I Index		>>I		Back
	Tracking/V-Lock+		Ch +		Dual






 



 
 




 



 





 

 









 


 
 



 







 










 

 





	Original	Replacement	Original	Replacement
	Power			Power
	Direct Tv Rec			Options
	CH+			Ch +
	CH-			Ch -
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0
	-/--			Guide
	Vol+			Vol +
	Vol-			Vol -





	Original	Replacement		Original	Replacement
	Power VCR	 Power		Index >>I	 >>I
	Up	 Up		Tracking/V.Lock+	 Ch +
	Down	 Down		Tracking/V.Lock-	 Ch -
	Right	 Right		OSD	 Back
	Left	 Left		Audio Out	 Dual
	Play	 Play		Input Select	 AV
	Stop	 Stop		Tv/AV	 Pre Ch
	>>	 >>		1	 1
	<<	 <<		2	 2
	Pause/Slow	 Pause		3	 3
	Rec/OTR	 Rec		4	 4
	Display	 Info		5	 5
	Reset	 TV/R		6	 6
	Zero Stop	 Smart		7	 7
	Jog/Shuttle On	 Media		8	 8
	Jog/Shuttle ▲	 Shift + Media		9	 9
	I<< Index	 I<<		0	 0





Original	Replacement	Original	Replacement
-/--	Guide	Check	Green
Vol+	Vol +		
Vol-	Vol -		
Tv CH+	Shift + Ch +		
Tv CH-	Shift + Ch -		
Direct Tv Rec	Options		
AV Link	Text		
Menu	Menu		
Exit	Exit		
Store	3D		
Nothing 1	Shift + AV		
Nothing 2	Shift + Format		
SP/LP	Format		
PDC/VPS	Blue		
Transmit	Yellow		
Power Tv	Shift + Power		
Timer Rec	Red		

