 
 



 





Original	Replacement
 Standby	 Power
 Eject	 Eject
 Audio Out	 Dual
 Display	 Info
 Timer On/Off	 Sleep
 Timer On/Off	 Shift + AV
 Mode OSD	 Media
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Set	 Options
 Clear	 Exit
 SV/V+/Timer	 3D
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Zero Back	 Blue
 Skip Search	 Yellow
 Super P.	 Red
 Lock	 Shift + Stop
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/AM/PM	 Guide











 
 
 
 
 
 



 
 




 



 


 





Original		Replacement		Original		Replacement	
	Input Select		AV				
	Play		Play				
	>>		>>				
	<<		<<				
	Stop		Stop				
	Pause/Still		Pause				
	Rec		Rec				
	Tv/VCR		TV/R				
	A.DUB		Format				
	Direct Rec Tv		Back				
	Tape Speed		Text				
	I> Slow		Subt				
	DPSS >/+		>>I				
	< DPSS/-		I<<				
	Smart		Smart				





Original		Replacement		Original	Replacement
	Standby		Power		
	CH+		Ch +		
	CH-		Ch -		
	Vol+		Vol +		
	Vol-		Vol -		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	-/-		Guide		
	Input Select		AV		

