








 







 

 

 















 


 
 


 




 



 


 
 

 

 










Original		Replacement		Original		Replacement	
	Power		Power		5		5
	⏩		3D		6		6
	←		Back		7		7
	SAT		Smart		8		8
	Mute		Mute		9		9
	TV		TV/R		0		0
	[=]		Text		+/-		Guide
	→ / []		AV		C		Exit
	□ → / [?]		Shift + AV		[=+]		Shift + Stop
	PIP / Split		Options		↑		Up
	PIP to Main		List		Vol+		Vol +
	PIP Swap / Split Swap		Pre Ch		Vol-		Vol -
	Split Hold		Shift + Pause		Prog+		Ch +
	1		1		Prog-		Ch -
	2		2		Red		Red
	3		3		Green		Green
	4		4		Yellow		Yellow



 

 






 
 


 






Original	Replacement	Original	Replacement
	Blue		Blue
	[≡?][+]		Info
	↔◇		D. Menu
	[Ⓞ]		Sleep
	■	+	Shift + Format
	Aspect		Format
	♪		Dual
	+		Right
	-		Left
	Menu		Menu
	OK		Ok
	Power Down	+	Shift + Power
	Prog+ Down	+	Shift + Ch +
	Prog- Down	+	Shift + Ch -
	<<		<<
	Play		Play
	>>		>>
			Stop
			Pause



 








 
 


 
 





Original	Replacement	Original	Replacement
 Power Down	 Power		
 Prog+ Down	 Ch +		
 Prog- Down	 Ch -		
 Stop	 Stop		
 Pause	 Pause		
 Rec	 Rec		
 >>	 >>		
 Play	 Play		
 <<	 <<		





Original		Replacement		Original		Replacement	
	Power Down		Power				
	Prog+ Down		Ch +				
	Prog- Down		Ch -				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				
	>>		>>				
	Play		Play				
	<<		<<				





Original	Replacement	Original	Replacement
Power Down	Power		
Prog+ Down	Ch +		
Prog- Down	Ch -		
<<<	<<<		
Play	Play		
>>>	>>>		
Stop	Stop		
Pause	Pause		
Rec	Rec		

