 
 
 
 
 

 
 

 

 
 


 

 

 

 
 
 

 





 















Original	Replacement
 Power	 Power
 1	 1
 2	 2
 Eject/Open-Close	 Eject
 VCR	 Smart
 DVD	 Media
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 AV/Input	 AV
 >>	 >>

Original	Replacement
 <<	 <<
 >>	 >>
  <<	  <<
 Stop	 Stop
 Play	 Play
 Pause/Step	 Pause
 Disc Menu/List	 Menu
 Home	 Shift + Smart
 Display	 Info
 Return	 Back
 Enter	 Ok
 Up	 Up
 PR/CH/TRK+	 Ch +
 PR/CH/TRK-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left





	Original	Replacement	
	O))/Audio	 Dual	
	[...]/Subtitle	 Subt	
	Zoom	 +  Shift + Eject	
	I.Skip	 3D	
	Rec	 Rec	
	TV/VCR	 TV/R	
	CHP.ADD	 Text	
	Title	 Options	
	Rec Mode	 +  Shift + Rec	
	Dubbing	 Mute	
	Play Mode	 +  Shift + Play	
	Marker	 Pre Ch	
	Search	 +  Shift + TV/R	
	Thumbnail	 List	
	Power Tv	 +  Shift + Power	
	AV/Input Tv	 +  Shift + AV	
	Vol+ Tv	 Vol +	

	Original	Replacement	
	Vol- Tv	 Vol -	
	PR/CH+ Tv	 +  Shift + Ch +	
	PR/CH- Tv	 +  Shift + Ch -	

