 





 



 




 



 


 







 



 


 
 


 
 
 
 


 
 
 



 
 
 


 

 

 









Original	Replacement	Original	Replacement
 On	 Power	 Left	 Left
 Off	 Shift + Power	 1	 1
 Vol+	 Vol +	 2	 2
 Vol-	 Vol -	 3	 3
 Mute	 Mute	 4	 4
 Test	 Smart	 5	 5
 Night	 Exit	 6	 6
 [=]	 Text	 7	 7
 Sleep	 Sleep	 8	 8
 Surr.	 Dual	 9	 9
 SPKR/Menu	 Menu	 0	 0
 Delay/Normal	 Info	 Tun-M/[≡+]	 Guide
 CH./[≡?]	 TV/R	 Mem/[≡◇]	 Pre Ch
 Digital/[≡X]	 Media	 Tuning ▲	 Ch +
 Up	 Up	 Tuning ▼	 Ch -
 Down	 Down	 Direct/Green	 Green
 Right	 Right	 Clear/Yellow	 Yellow



 


 


 
 




 
 



 



 


 
 

 
 
 
 


 
 


 
 
 
 



 
 



 

 


 


 









Original	Replacement
Preset ▲	Shift + Ch +
Preset ▼	Shift + Ch -
RDS/D.Skip	Options
Set	Ok
Red	Red
Blue	Blue
DVD	Shift + 2
AVR	Shift + 1
CD	Shift + 3
Tape	Shift + 4
VID1/VCR	Shift + 5
VID2/TV	Shift + 6
VID3/CBL/SAT	Shift + 7
VID4	Shift + 8
AM/FM	Shift + 9
> DVD	Play
<< DVD	<<

Original	Replacement
>> DVD	>>
Stop DVD	Stop
Pause DVD	Pause
I<</Skip Down	I<<
Skip Up/>>I	>>I





Original	Replacement	Original	Replacement
 Power On	 Power	 3	 3
 Power Off	 Shift + Power	 4	 4
 Night	 Exit	 5	 5
 [=]	 Text	 6	 6
 Vol+	 Vol +	 7	 7
 Vol-	 Vol -	 8	 8
 SPKR/Menu	 Menu	 9	 9
 CH./[≡?]	 TV/R	 0	 0
 Digital/[≡X]	 Media	 Tun-M/[≡+]	 Guide
 Delay/Normal	 Info	 Mem/[≡◇]	 Pre Ch
 Up	 Up	 Direct	 Smart
 Down	 Down	 Clear	 Shift + Exit
 Right	 Right	 Preset ▲	 Ch +
 Left	 Left	 Preset ▼	 Ch -
 Set	 Ok	 RDS/D.Skip	 Options
 1	 1	 >>	 >>
 2	 2	 <<	 <<

 





 


 







 


 



 









 
 
 



 









 
 

 





 


 









Original		Replacement		Original		Replacement	
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	>>		>>				
	<<		<<				








Original	Replacement	Original	Replacement
 Power On	 Power	 Preset ▲/Blue	 Ch +
 Power Off	 Shift + Power	 RDS/D.Skip	 Options
 SPKR/Menu	 Menu	 >>	 >>
 Delay/Normal	 Info	 <<	 <<
 1	 1	 Play	 Play
 2	 2	 Stop	 Stop
 3	 3	 Pause	 Pause
 4	 4	 >>	 >>
 5	 5	 <<	 <<
 6	 6	 Power (On /Off)	 Media
 7	 7	 PR+ VCR	 Shift + Ch +
 8	 8	 PR- VCR	 Ch -
 9	 9	 Vol+ VCR	 Vol +
 0	 0	 Vol- VCR	 Vol -
 Tun-M/[≡+]]	 Guide	 Input VCR	 AV
 Mem/[≡♦]	 Pre Ch	 1 VCR	 Shift + 1
 Direct	 Smart	 2 VCR	 Shift + 2





	Original	Replacement	
	3 VCR	 + 	Shift + 3
	4 VCR	 + 	Shift + 4
	5 VCR	 + 	Shift + 5
	6 VCR	 + 	Shift + 6
	7 VCR	 + 	Shift + 7
	8 VCR	 + 	Shift + 8
	9 VCR	 + 	Shift + 9
	0 VCR	 + 	Shift + 0
	Clear VCR		Exit
	Play VCR		Red
	Stop VCR		Green
	Rec VCR		Rec
	>> VCR		Blue
	<< VCR		Yellow

Original	Replacement





	Original	Replacement	Original	Replacement
	<>	 PLAY MODE Play		
	>>	 >>		
	<<	 <<		
	Stop	 Stop		
	Rec	 REC MODE Rec		

