







 





 
 















 
 

 

 






 


 




 




 







 


 
 


 







Original	Replacement	Original	Replacement
 Power	 Power	 Smart/Mic	 Smart / List
 1	 1	 P-	 CH- / Page-
 2	 2	 Home	 Shift + Menu /
 3	 3	 Home	 Display / Media
 4	 4	 [G]	 Guide / EPG / -/-
 5	 5	 Up	 Up
 6	 6	 i	 Info / Angle
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Right	 Right
 Lang	 Audio / Lang I/II	 ←	 Back / Return
 0	 0	 Down	 Down
 [≡]...	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+	 Netflix	 Shift + Red / Netflix /
 Mute	 Mute / Dimmer	 You Tube	 Shift + Yellow / YouTube /
 P+ CH+ / Page+	 CH+ / Page+	 Menu	 Menu / Home
 Vol-	 Vol-	 Source	 AV / Input / RDS

Original	Replacement	Original	Replacement
 Power	 Power	 Smart/Mic	 Smart / List
 1	 1	 P-	 CH- / Page-
 2	 2	 Home	 Shift + Menu /
 3	 3	 Home	 Display / Media
 4	 4	 [G]	 Guide / EPG / -/-
 5	 5	 Up	 Up
 6	 6	 i	 Info / Angle
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Right	 Right
 Lang	 Audio / Lang I/II	 ←	 Back / Return
 0	 0	 Down	 Down
 [≡]...	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+	 Netflix	 Shift + Red / Netflix /
 Mute	 Mute / Dimmer	 You Tube	 Shift + Yellow / YouTube /
 P+ CH+ / Page+	 CH+ / Page+	 Menu	 Menu / Home
 Vol-	 Vol-	 Source	 AV / Input / RDS



