
 
 




 

 
 





 



 
 


 

 


 
 









 






 

 


 





 

 




 
 

 

 
 
 
 

Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Media	Menu Off	 Exit
Reveal	 Smart	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Info	 Info	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7




 
 
 
 
 

 

 
 

 









 
Original	Replacement	Original	Replacement
8	 8		
9	 9		
Guide -/-- 1.	 Guide		
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Bright+ Mode	 Options		
Mix Scan	 +  Shift + Smart		
Game Coo	 +  Shift + Options		
Aft/Caf	 +  Shift + Menu		
Blue	 Blue		
On/Tim	 List		
Off/Tim	 +  Shift + List		
Store	 +  Shift + Media		
AV 2	 +  Shift + AV		


 
 

 
 
 



 

 
 
 






 



 




Original	Replacement	Original	Replacement
Search	 +  Shift + TV/R		
Rotate Text	 +  Shift + 3D		
Disp	 3D		
Color+ P.Std	 +  Shift + Format		
Store Text	 +  Shift + Text		
Tune-	 +  Shift + Left		
Tune+	 +  Shift + Right		
Contrast+	 +  Shift + Ch +		
Color- S.Std	 +  Shift + Dual		
Contrast-	 +  Shift + Ch -		
3.*	 +  Shift + Guide		
4.# 16:9	 Format		
Surround	 +  Shift + Red		
Nicam/Mono	 +  Shift + Green		
Level L	 +  Shift + Yellow		
Level R/Woofer	 +  Shift + Blue		



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 +  Shift + Smart	Menu Off	 Exit
Txt Stop	 Stop	Menu Down	 Down
Reveal	 Smart	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Menu audio	 Dual
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7





Original	Replacement	
8	 8	8
9	 9	9
Guide -/-- 1.	 GUIDE	Guide
0/10	 0	0
2.Fav P/C 2.	 PRE-CH	Pre Ch
Red	 A	Red
Audio+	 +  LIST	Shift + List
Bright+ Mode	 +  3D	Shift + 3D
Green	 B	Green
Rotate Text	 PLAY MODE	Play
Mix Scan	 LIST	List
Aft/Caf	 +  OK	Shift + Ok
Yellow	 C	Yellow
Blue	 D	Blue
Color+ P.Std	 +  PICTURE FORMAT	Shift + Format
Tone-	 + 	Shift + Down
Search	 +  SEARCH TV/R	Shift + TV/R

Original	Replacement	
Tone+	 + 	Shift + Up
Disp	 3D	3D
Store Text	 +  REPEAT TEXT	Shift + Text
Store	 APP MEDIA	Media
On/Tim	 SETTINGS OPT	Options
Off/Tim	 +  SETTINGS OPT	Shift + Options
AV 2	 +  TIMER AV	Shift + AV
Color- S.Std	 +  SOUND DUAL	Shift + Dual
4.# 16:9	 PICTURE FORMAT	Format
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
Browse	 +  RETURN BACK	Shift + Back
Contrast+	 + 	Shift + Ch +
Contrast-	 + 	Shift + Ch -
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow





Original	Replacement	Original	Replacement
Level R/Woofer	 +  Shift + Blue		

