



 








 
 
 






 



 

 

 





 











 





 















Original	Replacement
 Power	 Power
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 <<	 << / Tune-
 Guide	 Guide / EPG / -/-
 3D	 Shift + 3
 Smart Tv	 Smart / List
 Home	 Menu / Home
 Ambilight	 Display / Media
 [<>]	 Picture / Format
 TV	 TV/Radio /
 OK	 OK
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 [i]/Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Back	 Back / Return
 List	 Shift + Smart / List
 Ill/Options	 Setup / OPT /
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1



