













 

 
 
 







 
 

 








Original	Replacement
 Power	 Power
 Ambilight	 Pre Ch
 Windows	 Shift + Media
 Tv/Exit	 Exit
 Rakuten Tv	 TV/R
 Menu	 Menu
 Netflix	 Media
 Pair/Sources	 AV
 Smart/Colors	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 ←	 Back
 →	 Options
 Home	 Shift + Smart

Original	Replacement
 <<	 <<
 Play	 Play
 >>	 >>
 Stop	 Stop
 Pause	 Pause
 Rec	 Rec
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Tv Guide	 Guide
 CH+	 Ch +
 CH-	 Ch -
 1	 1





Original		Replacement		Original		Replacement	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Text		Text				
	List		List				

