 

 

 



 

 

 

 

 

 

 

 

 

 



 
 






 

 









 



 






Original	Replacement	Original	Replacement
 PWR	 Power	 TV/Rad	 TV/Radio /
 TV/STB	 Display / Media	 1	 1
 2	 2	 3	 3
 4	 4	 5	 5
 6	 6	 7	 7
 8	 8	 9	 9
 Back	 Back / Return	 0	 0
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 OPT	 Setup / OPT /		

Original	Replacement	Original	Replacement
 Green	 Green / APP / Repeat	 A/V+	 AV / Input / RDS
 Yellow / FAV	 Yellow / YouTube / Repeat	 FAV	 Fav / Marker / PC
 Blue / A-Z	 Blue / Prime Video / Random	 Blue / A-Z	 Shift + Blue / Prime
 Menu	 Menu / Home	 EPG	 Guide / EPG / -/-
 Info	 Info / Angle	 Up	 Up
 Left	 Left	 Right	 Right
 Down	 Down	 Vol+	 Vol+
 Exit	 Exit / Cancel / Clear	 PR/CH+	 CH+ / Page+





Original	Replacement
	 Vol-
	 CH- / Page-
	 Pause / Step / Freeze
	 Play / Slow
	 << / Tune-
	 Stop / Hold
	 >> / Tune+
	 Rec / Rec Mode
	 Shift + Play /
	 Smart / List
	 Shift + Yellow / YouTube /
	 Shift + Fav / Marker / PC
	 Text / Goto
	 Shift + OK
	 Shift + Left
	 Shift + Right
	 Sleep / Timer

Original	Replacement

