



 
 


 



Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep / Timer
 CBL/SAT	 Shift + 0	 Volume+	 Vol+
 DVD	 Shift + 2	 CH/Page-	 CH- / Page-
 TV Audio	 Shift + 1	 Mute	 Mute / Dimmer
 Blu-ray	 Shift + 5	 Volume-	 Vol-
 AUX1	 Shift + 7	 Eco	 D.Menu / Top
 Tuner	 Shift + 6	 Info	 Info / Angle
 Bluetooth	 Shift + 9	 Up	 Up
 Game	 Shift + Fav / Marker / PC	 Option	 Shift + Setup / OPT / Tools
 AUX2	 Shift + Guide / EPG / -/--	 Left	 Left
 Phono	 Shift + 4	 Right	 Right
 USB	 Shift + 8	 Back	 Back / Return
 Media Player	 Display / Media	 Down	 Down
 CD	 Shift + 3	 Setup	 Setup / OPT /
 Online Music	 Smart / List	 Home	 Menu / Home
 Internet Radio	 Shift + Smart / List	 Stop	 Stop / Hold
 CH/Page+	 CH+ / Page+	 Pause	 Pause / Step / Freeze





Original	Replacement
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 I<</Tune-	 Shift + << /
 >>I/Tune+	 >>I / Preset+
 >>I/Tune+	 Shift + >> /
 <<	 << / Tune-
 >>	 >> / Tune+
 Smart Select 1	 Shift + Red / Netflix /
 Smart Select 2	 Shift + Green / APP /
 Smart Select 3	 Shift + Yellow / YouTube /
 Smart Select 4	 Shift + Blue / Prime
 Green/Movie	 Green / APP / Repeat
 Red/Music	 Red / Netflix / Search
 Blue/Game	 Blue / Prime Video / Random
 Yellow/Pure	 Yellow / YouTube / Repeat
 1	 1
 2	 2

Original	Replacement
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 OK





Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep / Timer
 CBL/SAT	 Shift + 0	 Volume+	 Vol+
 DVD	 Shift + 2	 CH/Page-	 CH- / Page-
 TV Audio	 Shift + 1	 Mute	 Mute / Dimmer
 Blu-ray	 Shift + 5	 Volume-	 Vol-
 AUX1	 Shift + 7	 Up	 Up
 Tuner	 Shift + 6	 Left	 Left
 Bluetooth	 Shift + 9	 Right	 Right
 Game	 Shift + Fav / Marker / PC	 Back	 Back / Return
 AUX2	 Shift + Guide / EPG / -/-	 Down	 Down
 Phono	 Shift + 4	 Home	 Menu / Home
 USB	 Shift + 8	 Stop	 Stop / Hold
 Media Player	 Display / Media	 Pause	 Pause / Step / Freeze
 CD	 Shift + 3	 Play	 Play / Slow
 Online Music	 Smart / List	 I<</Tune-	 Shift + << /
 Internet Radio	 Shift + Smart / List	 I<</Tune-	 I<< / Preset-
 CH/Page+	 CH+ / Page+	 >>I/Tune+	 >>I / Preset+





Original	Replacement
>> /Tune+	+ Shift + >> /
<<	<< / Tune-
>>	>> / Tune+
Smart Select 1	Red / Netflix / Search
Smart Select 2	Green / APP / Repeat
Smart Select 3	Yellow / YouTube / Repeat
Smart Select 4	Blue / Prime Video / Random
1	TV 1
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
0	HDMI - BAT 0

Original	Replacement
Enter	OK

 





 

 





 





 











 



 



Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep / Timer
 CBL/SAT	 Shift + 0	 Volume+	 Vol+
 DVD	 Shift + 2	 CH/Page-	 CH- / Page-
 TV Audio	 Shift + 1	 Mute	 Mute / Dimmer
 Blu-ray	 Shift + 5	 Volume-	 Vol-
 AUX1	 Shift + 7	 Up	 Up
 Tuner	 Shift + 6	 Left	 Left
 Bluetooth	 Shift + 9	 Right	 Right
 Game	 Shift + Fav / Marker / PC	 Back	 Back / Return
 AUX2	 Shift + Guide / EPG / -/-	 Down	 Down
 Phono	 Shift + 4	 Home	 Menu / Home
 USB	 Shift + 8	 Stop	 Stop / Hold
 Media Player	 Display / Media	 Pause	 Pause / Step / Freeze
 CD	 Shift + 3	 Play	 Play / Slow
 Online Music	 Smart / List	 I<</Tune-	 Shift + << /
 Internet Radio	 Shift + Smart / List	 I<</Tune-	 I<< / Preset-
 CH/Page+	 CH+ / Page+	 >>I/Tune+	 >>I / Preset+





Original	Replacement
 >> Tune+	 Shift + >> /
 <<	 << / Tune-
 >>	 >> / Tune+
 Smart Select 1	 Red / Netflix / Search
 Smart Select 2	 Green / APP / Repeat
 Smart Select 3	 Yellow / YouTube / Repeat
 Smart Select 4	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Enter	 OK

